

# ABSORPOLE

User instruction:

## For use in Container:

1. pull out the pole with the hook,
2. brake of safeguard-pin beside hook,
3. upper part –grey- connect with lower part (water-collector) –blue- with this safeguard-pin,
4. push pin from backside to front side,
5. hang up on lashing-hook inside Container.
6. ready. **ABSORPOLE** starts working

Storage of poles, please place upright the poles before using.


If salt or brine should come into contact with skin wash with water and soap. Contact a doctor if skin irritation appears. If salt or brine should come into eyes, rinse immediately with plenty of water, preferably lukewarm, for 10-15 minutes with the eyelids wide apart. Remove any contact lenses. Contact a doctor if irritation occurs.

## **Product-description:**

Blue plastic collector to collect water up to 2 L. Grey part with Calcium Chloride, safeguard, hook for hanging inside Container wall.

### measurements:

weight: 1,6 kg  
High: 119 cm  
wide: 11,6 cm  
deep: 3,5 cm

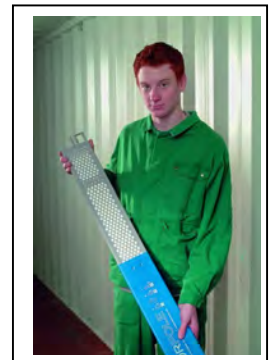

**ABSORTECH International AB**

Tel. +46 346 420 70  
Fax: +46 346 422 22

PL 2434

SE-31050 Sloeinge/Sweden

www.absortech.com , e-mail: info@absortech.com